


Measuring Guide

All you need is the height and width.

Simply measure the height and width of your wardrobe opening and we will do the rest. Our sliding wardrobe doors are designed to fit your space perfectly. Don't worry if your opening is not completely level or parallel, our sliding wardrobes can be adjusted to compensate for these conditions.

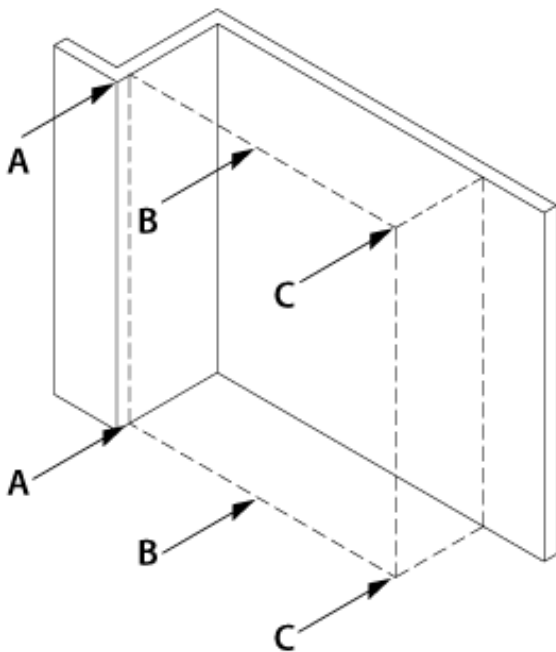

1. Measure Height

The top track system will accommodate up to 15mm in height difference. Measure in at least three places – the centre and both ends. See points A, B and C in the diagram to the left.


Important – Use the smallest measurement when supplying us with height measurements.

2. Measure Width

Measure in two places – the top and bottom. See points A and B in the diagram to the right. Please ensure you measure (A) above any skirting board and (B) below any coving that may hinder wardrobe installation.

Important – Use the largest measurement when supplying us with width measurements.

Note: both top and bottom tracks are supplied over length to allow you to trim them to exact requirements.

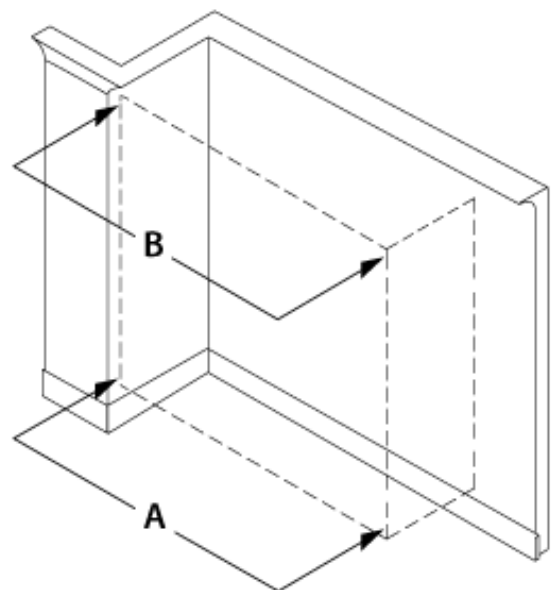

General Information

1. We only require the dimensions of your opening space and not your door sizes.
2. Use the largest width dimensions and the smallest height dimensions.
3. Our maximum height for our sliding wardrobes ranges is 2450mm. If your wardrobe space is taller than this, please let us know and we can provide other options including a matching header panel.
4. We will work out all the measurements for the tracking system and frames. These are supplied with a cut over length to allow you to trim them to the exact size. If you already have a frame, please let us know so we can create the doors to fit your existing frame.
5. Maximum width for wardrobe sliding doors are 1000mm. Two doors will be a maximum width of 2000mm, three doors will be a maximum width of 3000mm and a four door kit is 4000mm. If your space needs more than five doors, please contact us for a quote.
6. You may need to think about removing skirting boards and cornices before installing which will ensure a perfect fit. If you are installing on carpet it may be best to remove a section and replace with timber. This will ensure a stable bottom track.
7. You may need an end panel to finish your wardrobe at one end. If you require an end panel please let us know and we will provide a quote.

Contact Us

Please get in touch for any questions or quotes and we will get back to you. We will go above and beyond to ensure you get your dream wardrobe.

Email - enquiries@coastalwardrobesolutions.com.au

Alan - 0448 544 584

Josh - 0448 775 923